




INSTALLATION INSTRUCTIONS

2007-2017 Wrangler Windshield Light Bar PART #JK-6126

PARTS LIST:


1	Driver/Left Side Leg	2	8mm Lock Nuts
1	Passenger/Right Side Leg	2	2" Plastic caps for bottom of front legs
1	Cross Bar Light Mount	4	12mm Rubber Plug/Grommets
2	8mm x 65mm Button Head Allen Bolts Allen Bolts	4	Pre-Cut Foam Self-Stick Gaskets
4	8mm Flat Washers		

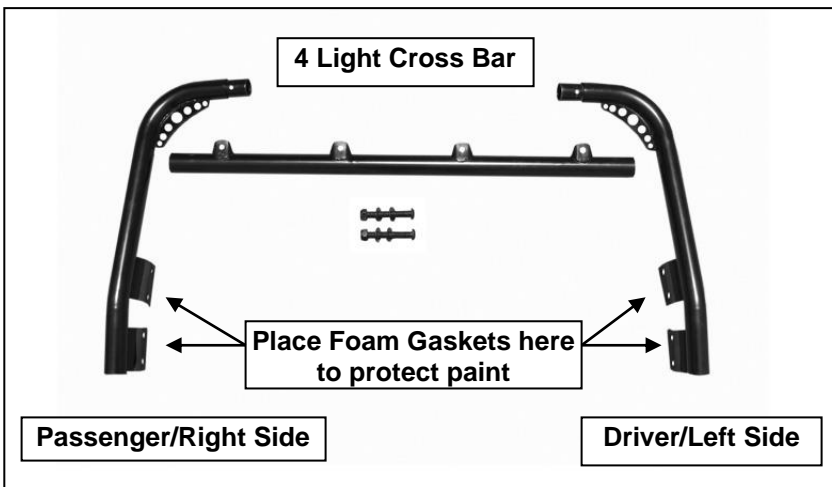

PROCEDURE: REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.



**** If you plan on running wiring internally through the tubes you should do so prior to assembly**

1. Peel, stick and trim the self sticking Foam Gaskets to the inside surface of the two mounting tabs on each support leg.
2. Remove the (4) factory outer windshield hinge bolts from the Passenger Side. Locate the Passenger Side Leg and attach it to the windshield hinge using the factory bolts removed in this step, (Fig 1).

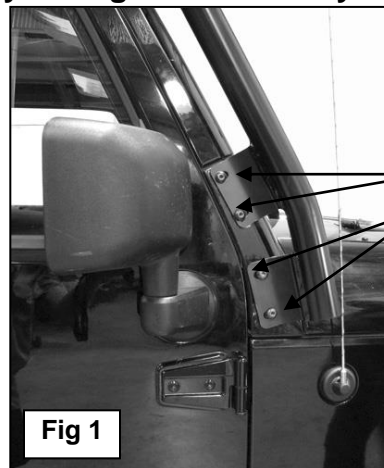

Use the (4)
factory hinge
bolts to secure
passenger side
Light Bar Leg

3. Slide the Driver Side Leg into the Cross Bar and lock into place with included (1) 8mm x 65mm Button Head Allen Bolt, (2) 8mm Flat Washers and (1) 8mm Nylock Nut. Only hand tight, do not fully tighten at this time, **(Fig 2)**.

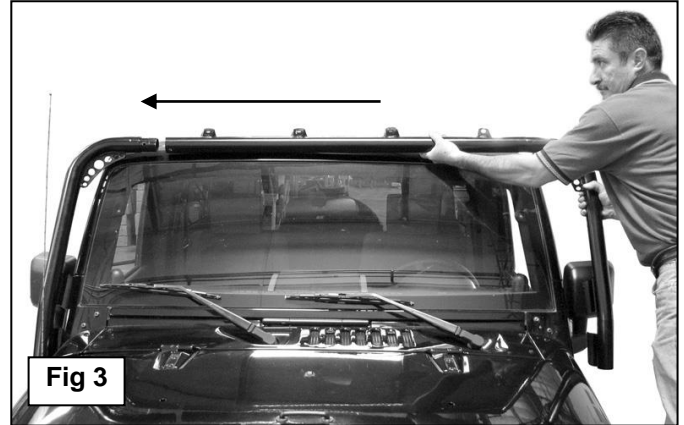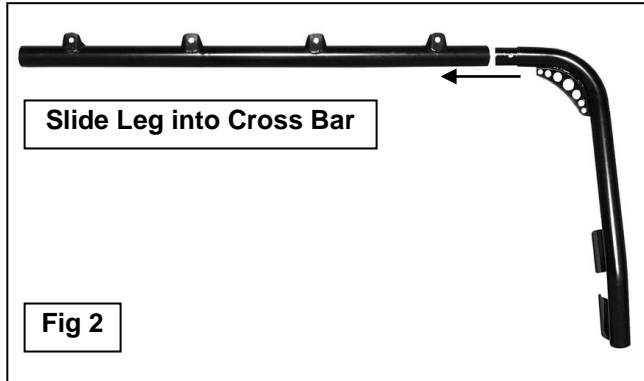

4. Remove the driver side (4) factory outer windshield hinge bolts. Carefully insert the cross bar and driver side leg into previously mounted passenger side leg, **(Fig 3, ABOVE)**. Align holes on the lower section of the Leg with holes on the windshield hinge. Secure Leg to vehicle using the factory bolts removed in this step, **(Fig 1)**. Snug tighten only at this time. Proceed to secure upper section of the Leg to Front Cross Bar using the included (1) 8mm x 65mm Allen Bolt, (2) 8mm Flat Washers, and (1) 8mm Nylock Nut, **(Fig 4)**. Do not fully tighten at this time.

5. If you are installing off road lights at this time, the cross bar can be rotated for better access by removing the (2) 8mm x 65mm Button Head Allen Bolts lock bolts and carefully rotating Cross Bar toward the front of the vehicle. **Remember:** Reinstall and tighten the (2) 8mm x 65mm Button Head Allen Bolts, (4) 8mm Flat Washers, and (2) 8mm Nylock Nuts once lights have been installed. Tighten all hardware at this time.

6. Do periodic inspections to the installation to make sure all hardware is secure and tight.



To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives

Driver's side and passenger's side installed